
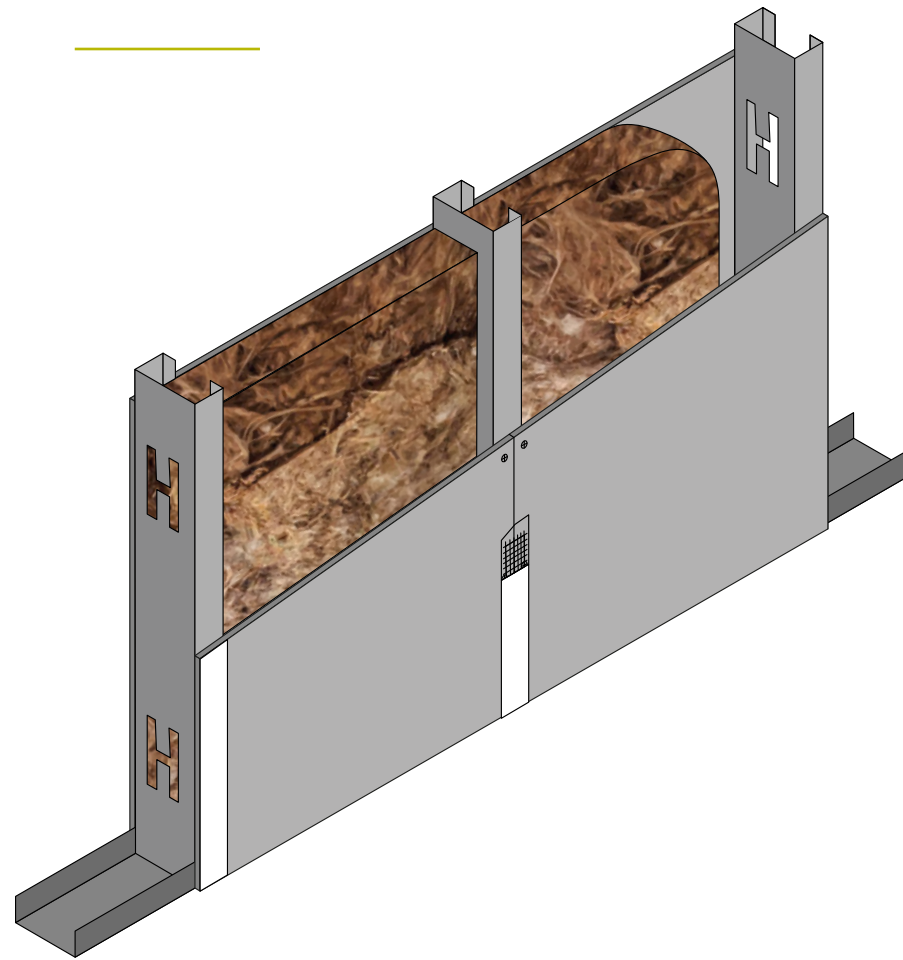


Standard DB rated Drywall

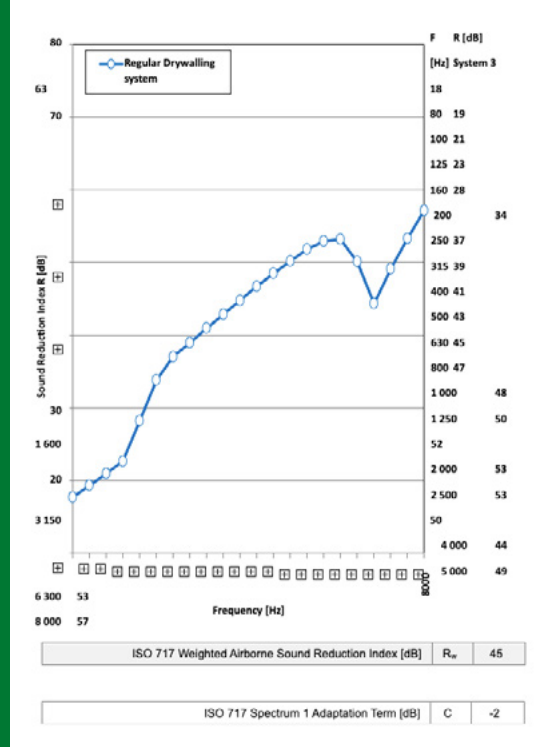


This system consists of the following products:

- 65mm track
- 64mm stud
- 6x25mm drywall screws
- 6x40mm drywall screws
- 8x13mm tek screws
- 12mm Regular Gypsum Boards
- Fibre tape
- Jointing plaster
- 6x40 nylon anchors
- Acoustic Batts

Installation methodology:


1.

Fasten the 65mm floor track to the floor using 6x40 nylon anchors.

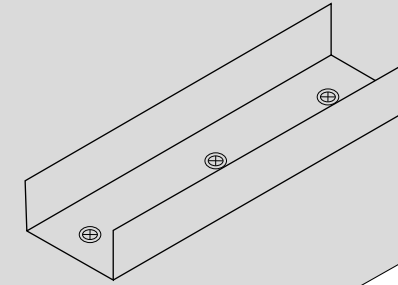


2.

Fasten the 64mm studs perpendicular to the 65mm track with 8x13mm tek screws, spacing of the studs to be every 600mm centres.

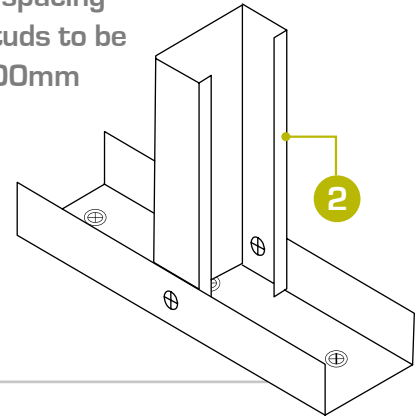

3.

Fasten the top track to the soffit using 6x40mm nylon anchors.

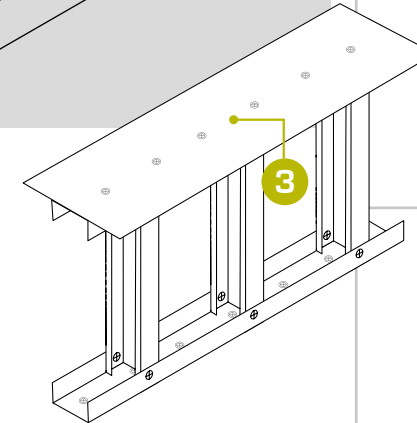


4.

Pack Knauf acoustic batts tightly into each cavity, leaving no gaps.



5.

Fasten a single layer of 12mm Regular Gypsum Board to the studs on both sides of the framework using 6x25mm drywall screws. Screws to be spaced at a maximum of 220mm centres.

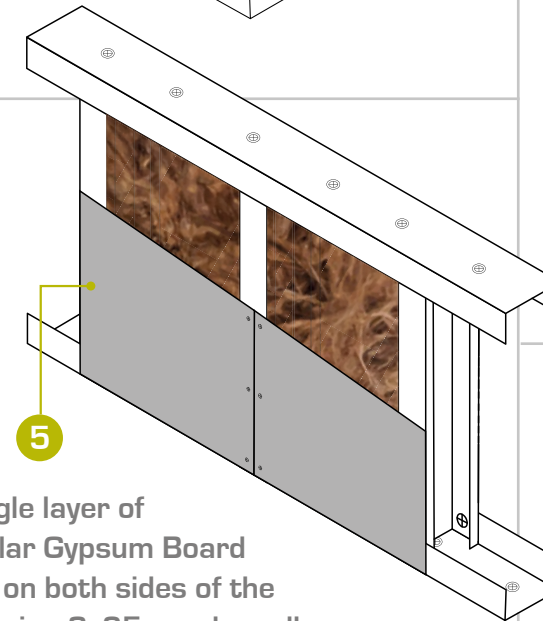

6.

Cover the joints with fibre tape & skim the fiber tape with jointing plaster.



BOQ Text

SOLID 12mm regular gypsum board fixed to both sides of SOLID 64mm galvanized stud and SOLID 65mm track at every 600mm centers, sealed with non-hardening mastic sealant. Install 63mm Knauf acoustic batt flush into the framework leaving no gaps. Apply SOLID fibre tape to all joints. Finish using SOLID HandSkim Plaster. All supplied and installed as per "SOLID Ceilings" instructions.